


EXP-CR600W

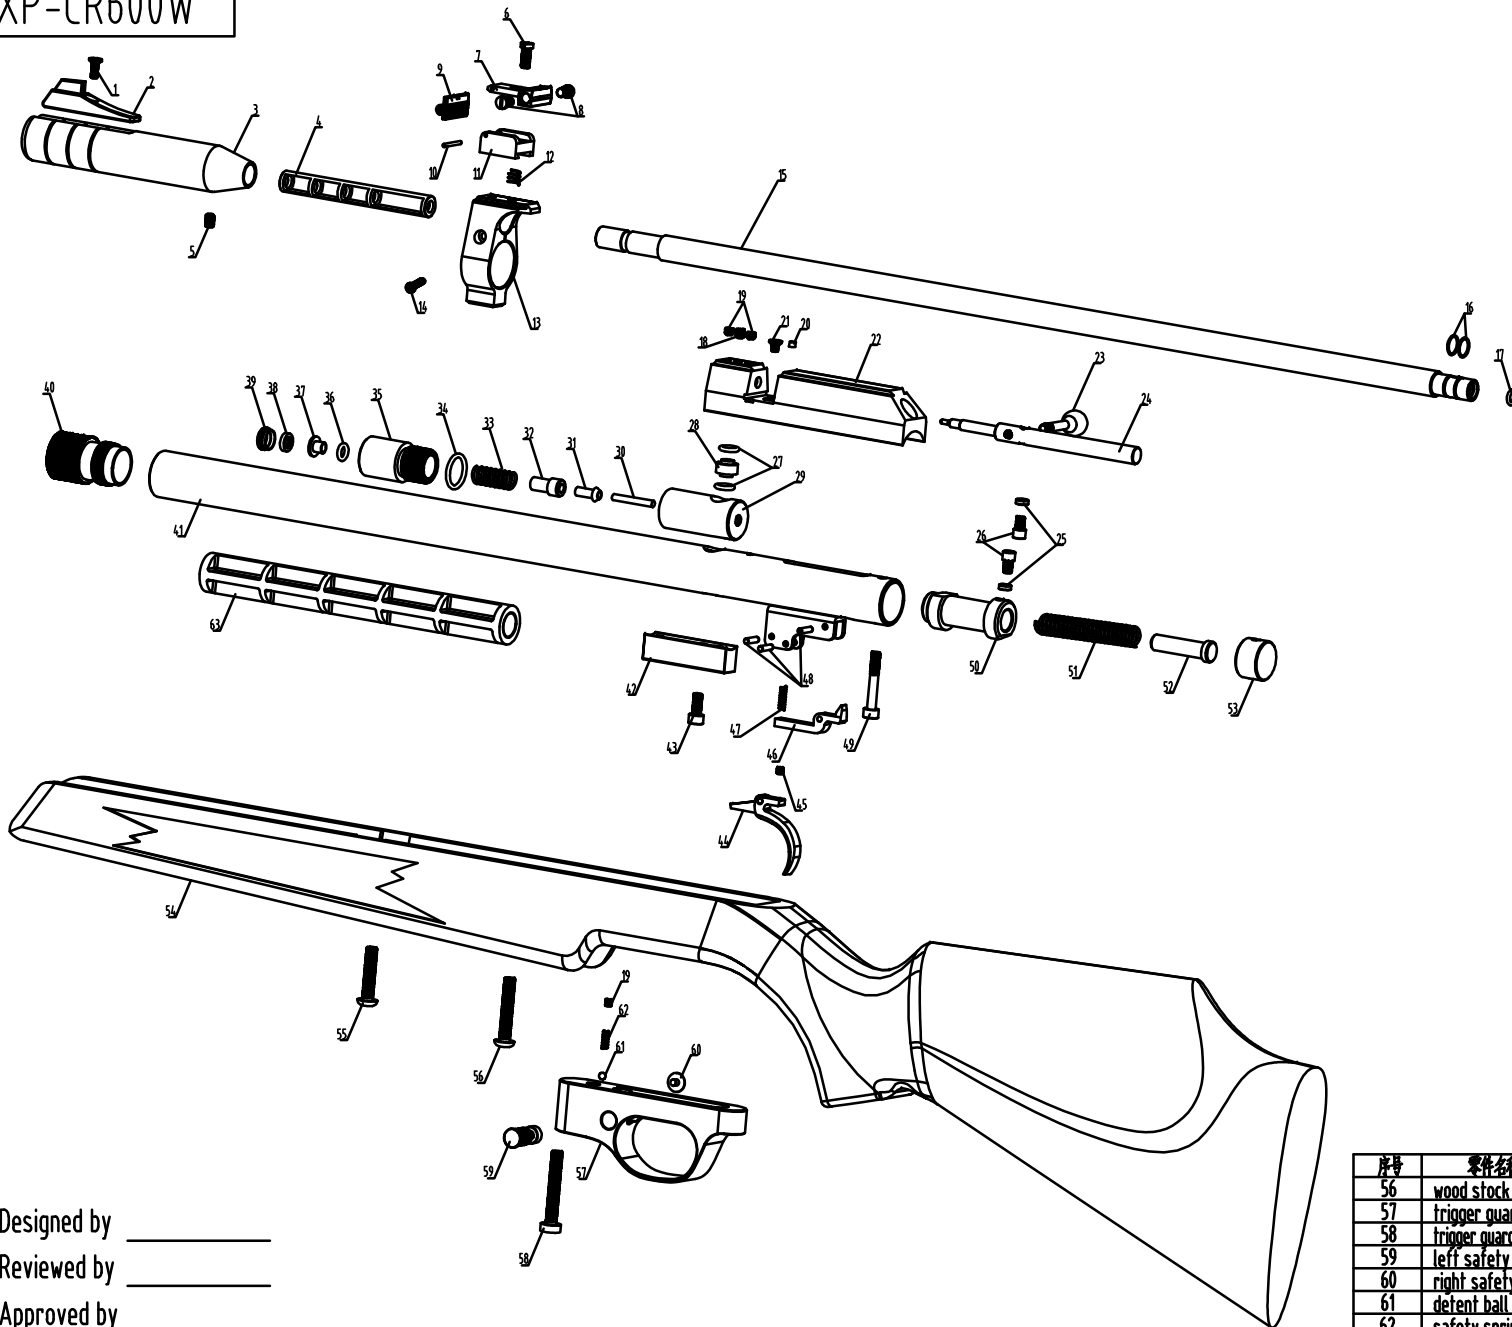

| 序号 | 零件名称 | 用量 |
|----|----------------------------------|----|
| 1 | front sight screw1 | 1 |
| 2 | front sight | 1 |
| 3 | suppressor | 1 |
| 4 | suppressor insert | 1 |
| 5 | suppressor screw | 1 |
| 6 | elevation screw | 1 |
| 7 | rear sight base | 1 |
| 8 | windage screw | 2 |
| 9 | rear sight | 1 |
| 10 | rear sight base pin | 1 |
| 11 | rear sight block | 1 |
| 12 | rear sight base spring | 1 |
| 13 | air reservoir mount | 1 |
| 14 | air reservoir mount fixing screw | 1 |
| 15 | barrel | 1 |
| 16 | barrel O ring | 2 |
| 17 | breech O ring | 1 |
| 18 | safety screw | 1 |
| 19 | barrel fixing screw | 3 |
| 20 | insert magnet1 | 1 |
| 21 | rear sight screw2 | 1 |
| 22 | breech | 1 |
| 23 | bolt | 1 |
| 24 | firing pin | 1 |
| 25 | piston screw bushing | 2 |
| 26 | piston screw | 2 |
| 27 | valve connector O ring2 | 1 |
| 28 | valve connector | 1 |
| 29 | valve2 | 1 |
| 30 | exhaust valve core pin | 1 |
| 31 | exhaust valve core | 1 |
| 32 | exhaust valve core cover | 1 |
| 33 | valve spring | 1 |
| 34 | valve O ring | 1 |
| 35 | valve1 | 1 |
| 36 | stopper ring | 1 |
| 37 | valve seal pin | 1 |
| 38 | valve seal | 1 |
| 39 | valve seal nut | 1 |
| 40 | fixing cover | 1 |
| 41 | air tube assembly | 1 |
| 42 | trigger base | 1 |
| 43 | trigger base screw | 1 |
| 44 | trigger | 1 |
| 45 | trigger screw | 1 |
| 46 | sear | 1 |
| 47 | trigger spring | 1 |
| 48 | trigger pin | 3 |
| 49 | Breech lower screw | 1 |
| 50 | piston | 1 |
| 51 | piston spring | 1 |
| 52 | piston rod | 1 |
| 53 | piston cover | 1 |
| 54 | wood stock | 1 |
| 55 | air reservoir mount screw | 1 |

| 序号 | 零件名称 | 用量 |
|----|---------------------|----|
| 56 | wood stock screw | 1 |
| 57 | trigger guard | 1 |
| 58 | trigger guard screw | 1 |
| 59 | left safety button | 1 |
| 60 | right safety button | 1 |
| 61 | detent ball | 1 |
| 62 | safety spring | 1 |
| 63 | gas cylinder rod | 1 |

设计 Designed by _____
 审核 Reviewed by _____
 批准 Approved by _____